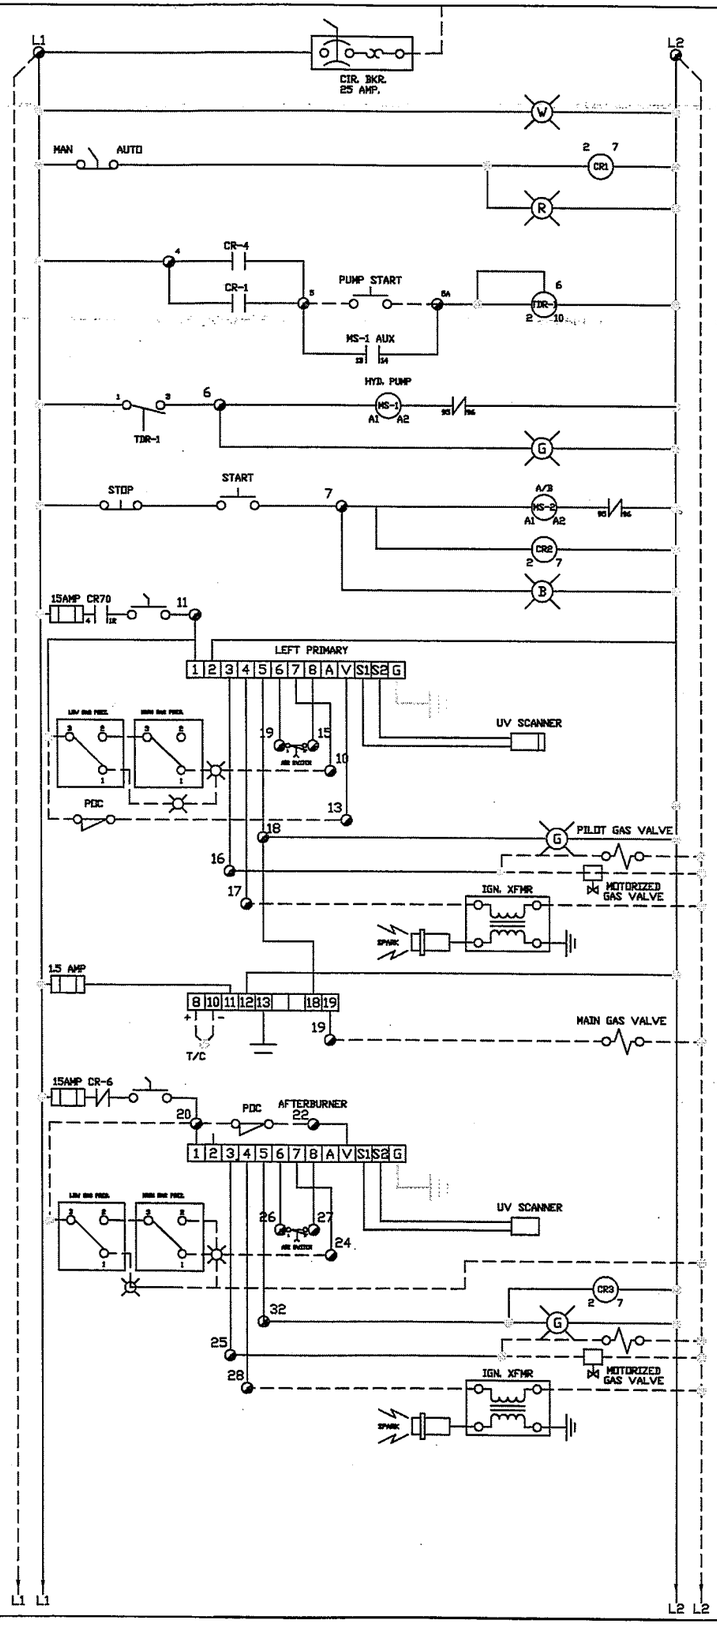

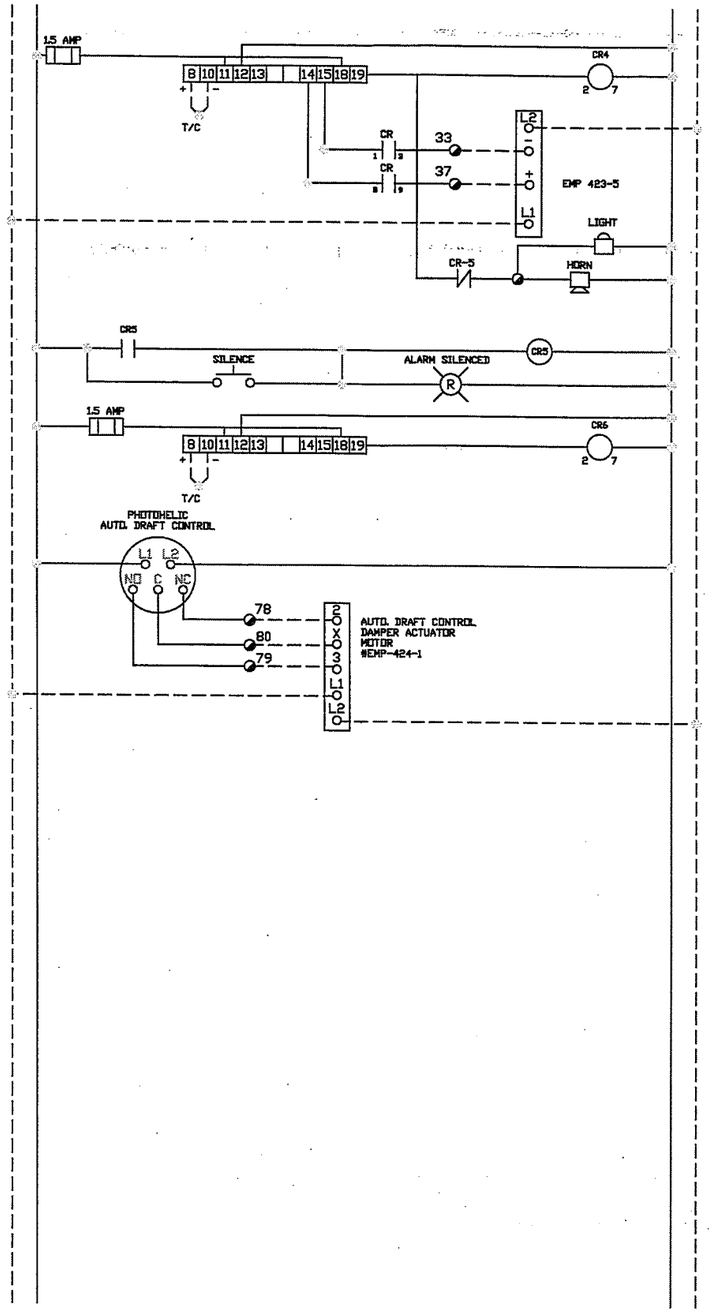

NOTES:

- INDICATES TERMINALS IN CONTROL PANEL AND FURNACE TERMINAL BOX
- INDICATES UV CONNECTION TERMINALS IN FURNACE TERMINAL BOX ONLY
- INDICATES WIRING IN CONTROL PANEL
- INDICATES EXTERNAL WIRING ON FURNACE AND FIELD WIRING BETWEEN CONTROL PANEL AND FURNACE TERMINAL BOX

ALL ULTRA-VIOLET DETECTOR WIRES BETWEEN PANEL AND FURNACE TERMINALS SHOULD BE RUN TOGETHER IN CONDUIT SEPARATE FROM ALL OTHER WIRING

RED THERMOCOUPLE LEAD IS THE NEGATIVE WIRE

Recycling Services Internationa

Ph: 800-737-4127 Fax: 518-233-006
www.recyclingfurnaces.com e-mail: Rsidave@aol.com

This drawing, in design and detail, is our property and must be used or copied except in connection with our work and w our written permission.

ELECTRICAL DIAGRAM

CUSTOMER AND JOB NO.	BY	DATE
FLORIDA TRANSFORMER		7-8-09
DESCRIPTION	SCALE	FILE NAME
G-466 H.T.	NTS	