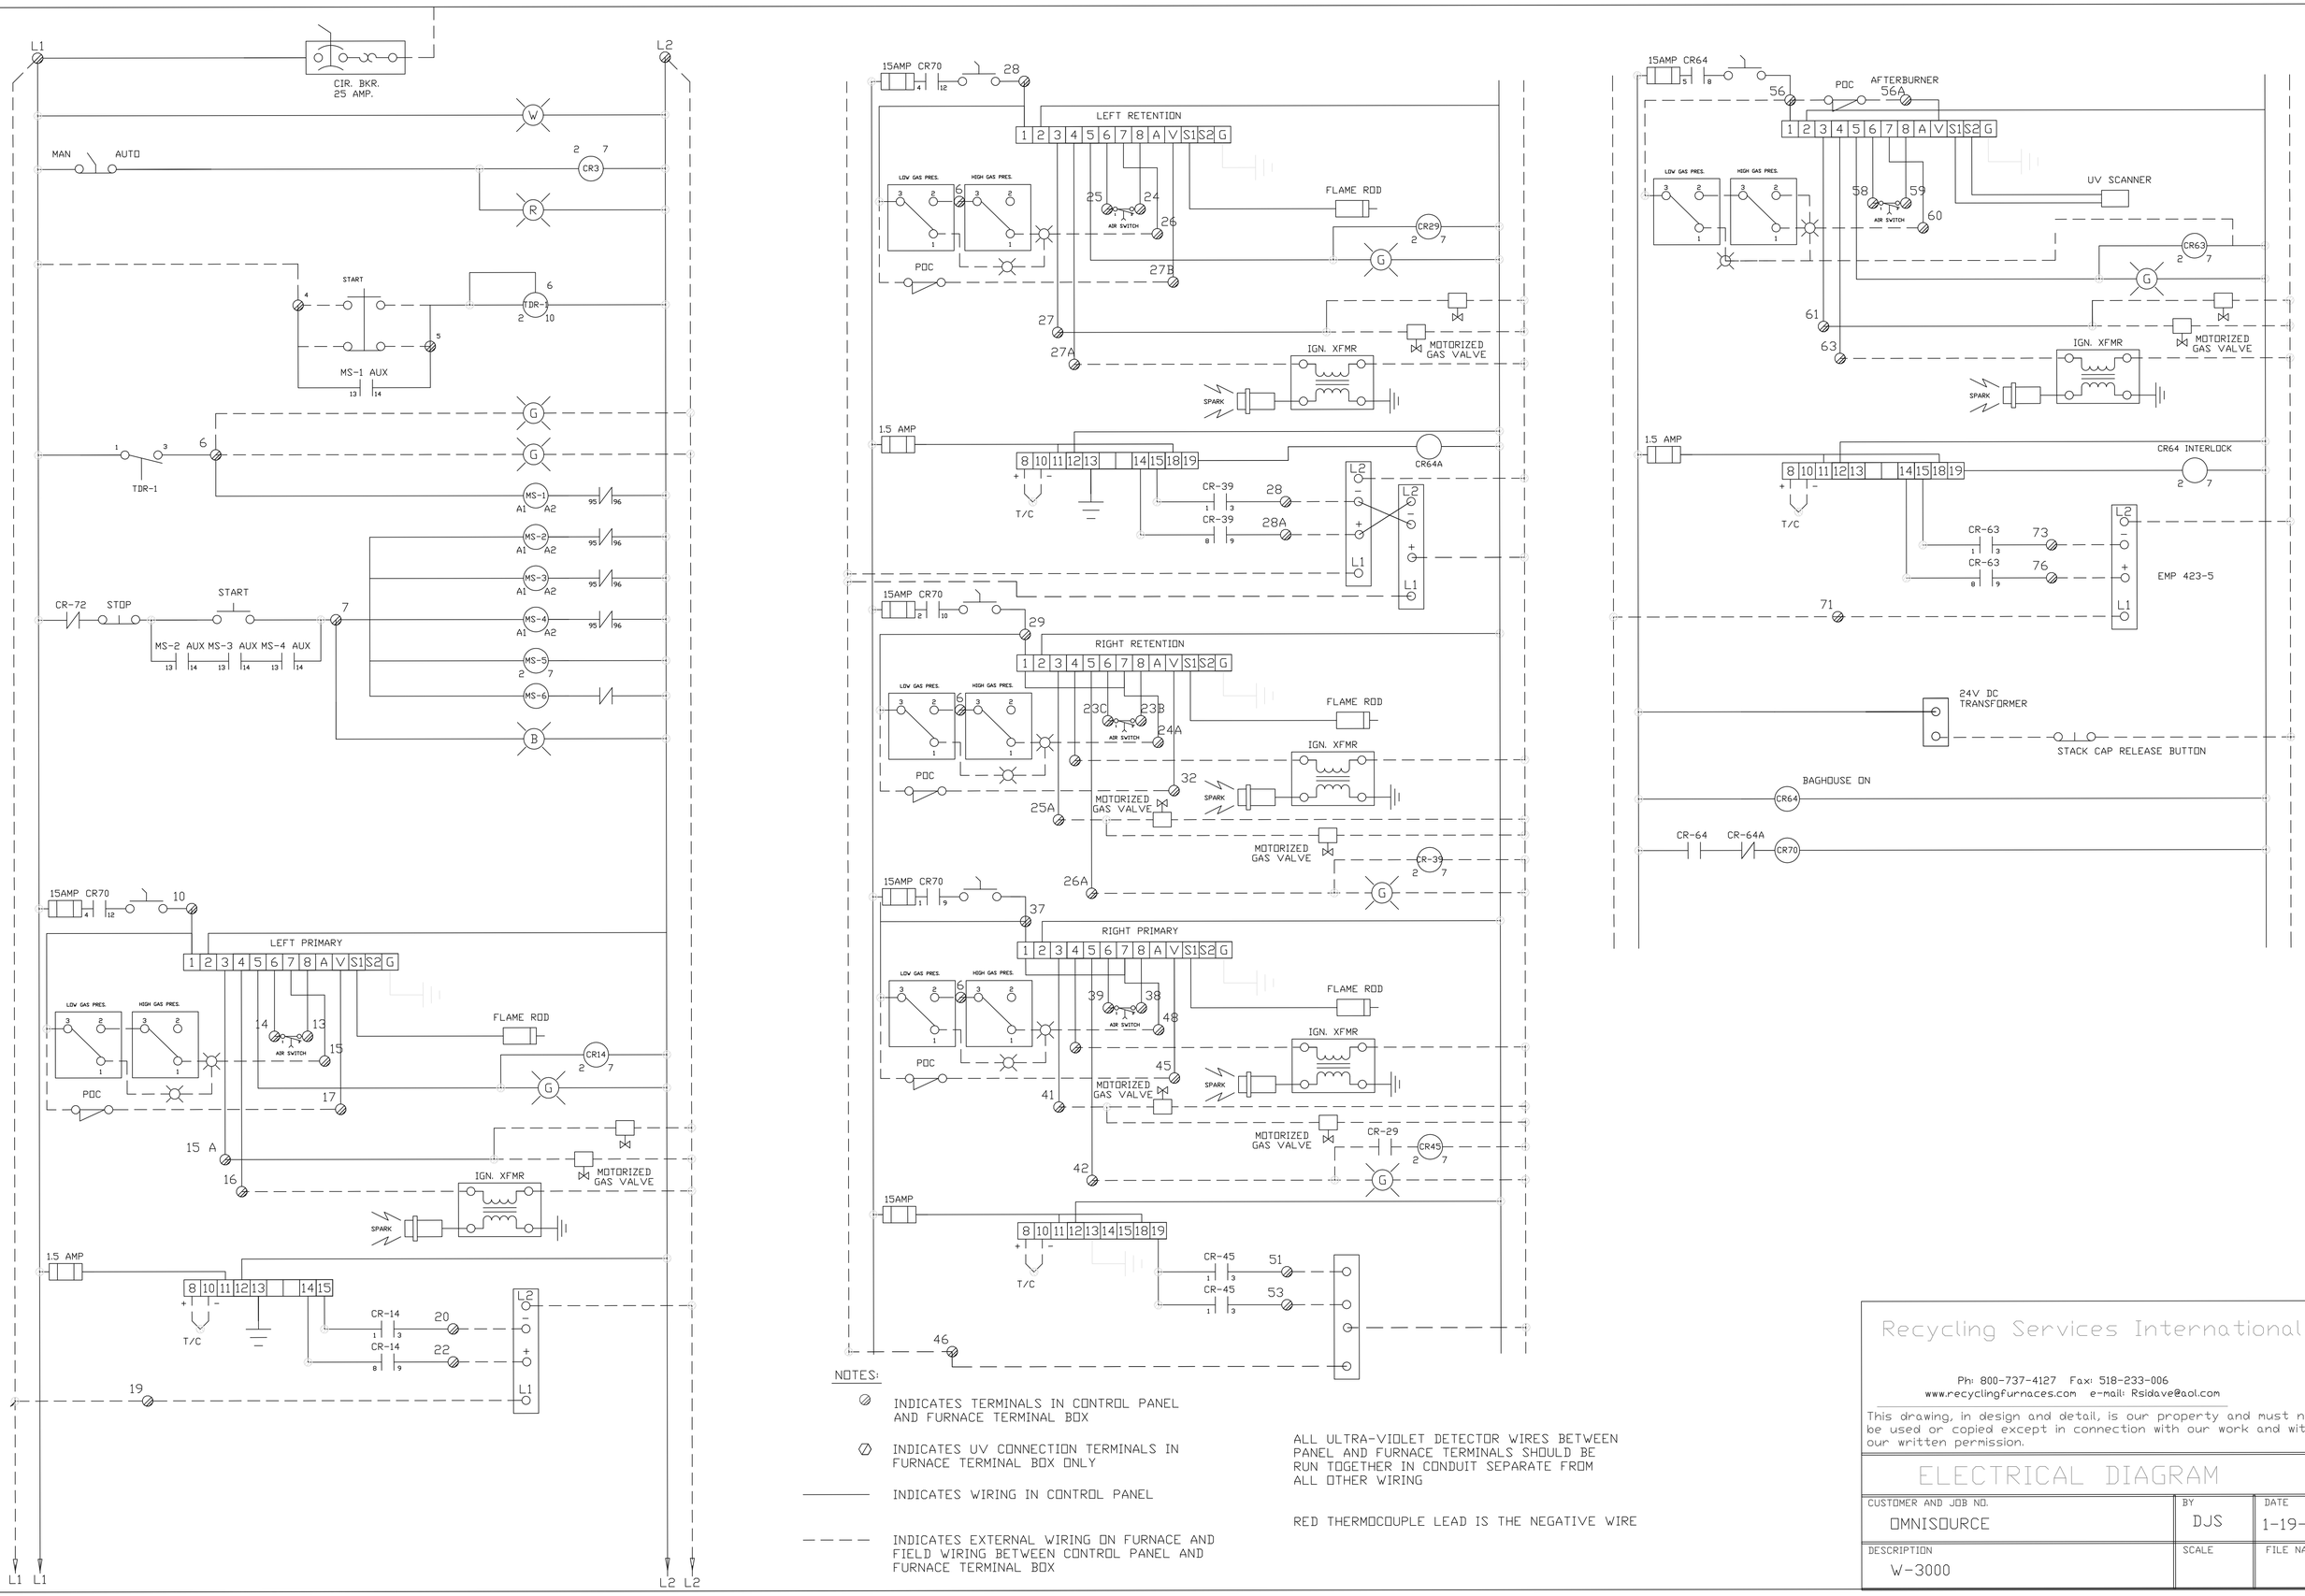

NOTES:

- INDICATES TERMINALS IN CONTROL PANEL AND FURNACE TERMINAL BOX
- INDICATES UV CONNECTION TERMINALS IN FURNACE TERMINAL BOX ONLY
- INDICATES WIRING IN CONTROL PANEL
- INDICATES EXTERNAL WIRING ON FURNACE AND FIELD WIRING BETWEEN CONTROL PANEL AND FURNACE TERMINAL BOX

ALL ULTRA-VIOLET DETECTOR WIRES BETWEEN PANEL AND FURNACE TERMINALS SHOULD BE RUN TOGETHER IN CONDUIT SEPARATE FROM ALL OTHER WIRING

RED THERMOCOUPLE LEAD IS THE NEGATIVE WIRE

Recycling Services International

Ph: 800-737-4127 Fax: 518-233-006
www.recyclingfurnaces.com e-mail: Rsidave@aol.com

This drawing, in design and detail, is our property and must not be used or copied except in connection with our work and with our written permission.

ELECTRICAL DIAGRAM

CUSTOMER AND JOB NO.	BY	DATE
OMNISOURCE	DJS	1-19-16
DESCRIPTION	SCALE	FILE NAME
W-3000		